



### STEP 1

Insert the device in the  $\varnothing 80$  opening you previously drilled.

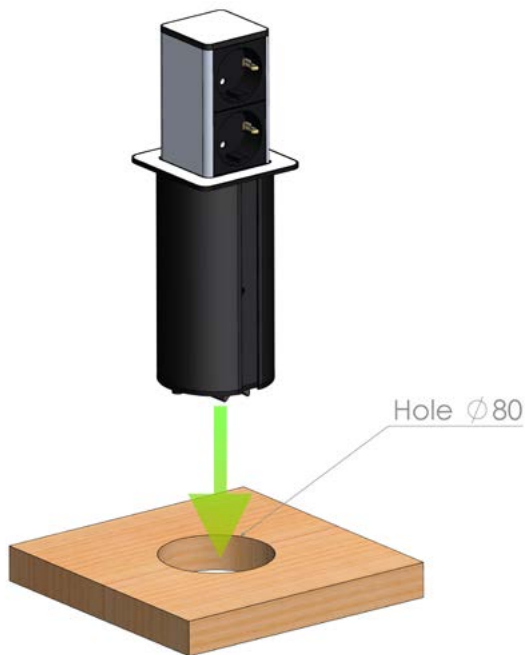

### STEP 1A (OPTIONAL)

If you want to install the device in a way that its top surface comes flush with the work surface, you need to create an opening shown in the image.

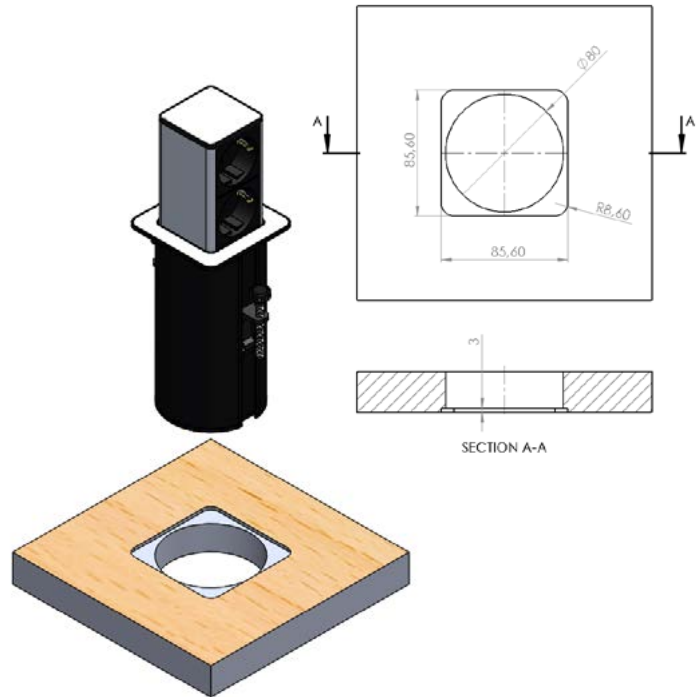

### STEP 2

Slide two clamps in device slots until they snap in place.



### STEP 3

Tighten screws of device clamps with provided Allen key.

