




1 - Loosen one of the two fixing screws of the mounting plate.

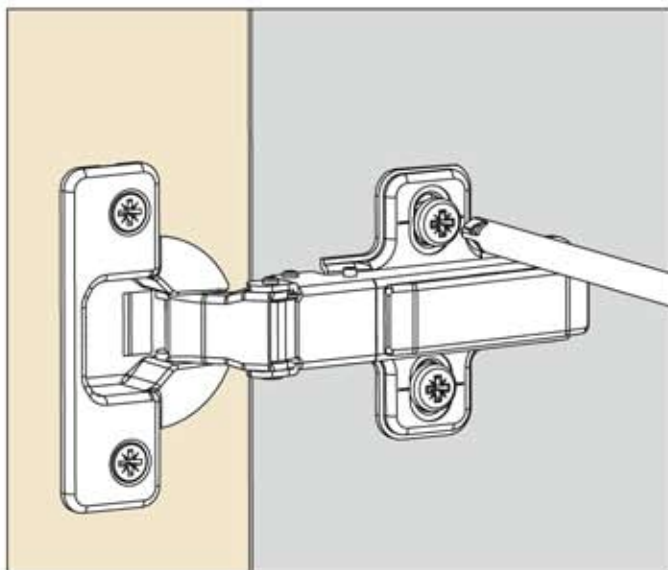


2 - Insert the adapter for the Smoveholder.

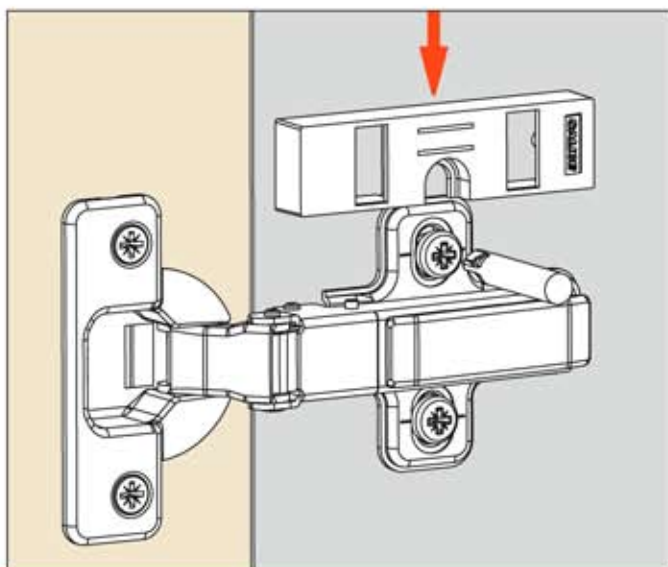


3 - Retighten the fixing screw of the mounting plate.

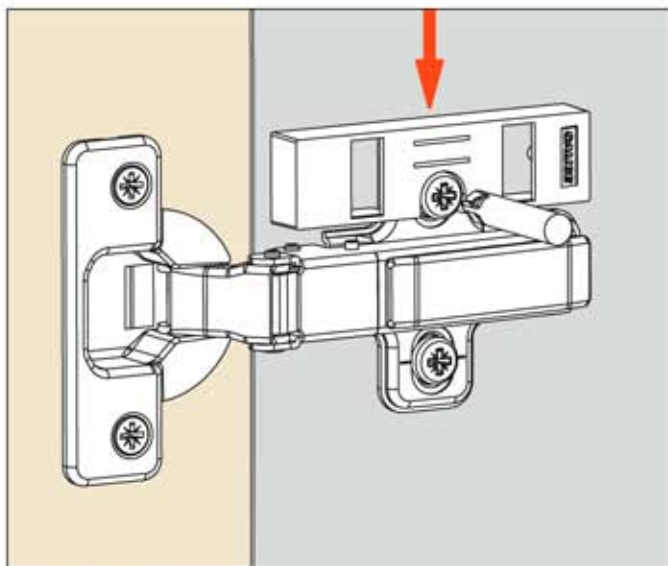

4 - Apply the Smoveholder to the adapter, as indicated.

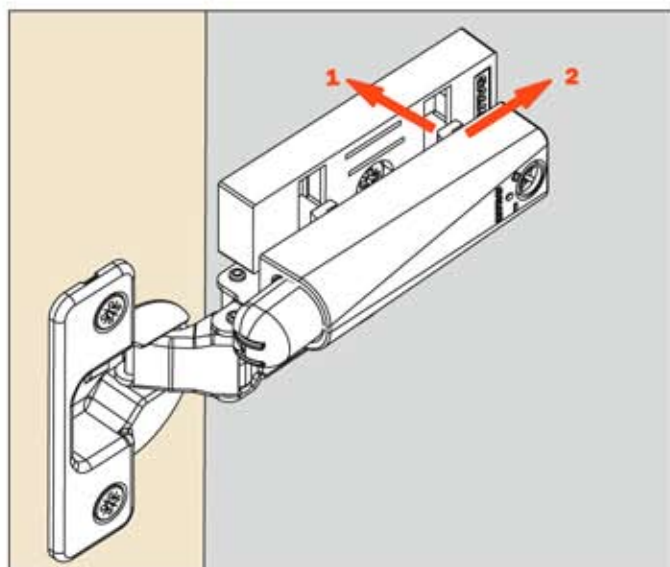

5 - Finally it is possible to adjust the Smove to increase or reduce the decelerating effect.

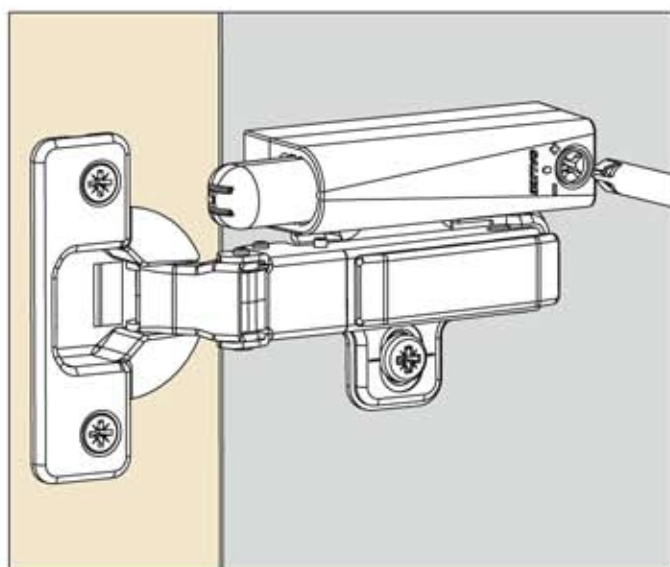

Positive adjustment

Rotating the screw towards the + sign, thus moving the Smove forward, the decelerating effect increases.



Negative adjustment

Rotating the screw towards the - sign, thus moving the Smove backwards, the decelerating effect reduces.

